

TILE EASY

INTERLOCKING FLOOR TILES


How to remove a damaged tile

STEP ONE: REMOVE GROUT

Remove the grout from around the damage tile using a sharp knife.


Cut the grout out until you can see the white filler rod.

Remove the grout and the filler rod

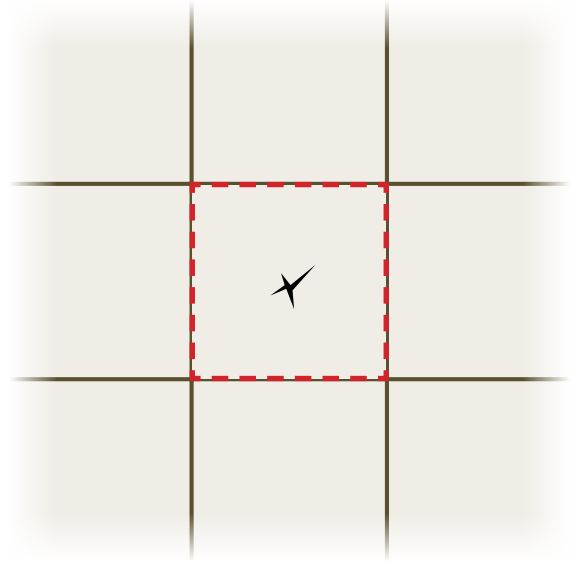


STEP TWO: TILE CUT OUT

Using a diamond blade and angle grinder cut a 100mm x 100mm square approx: out of the centre of the tile and remove.

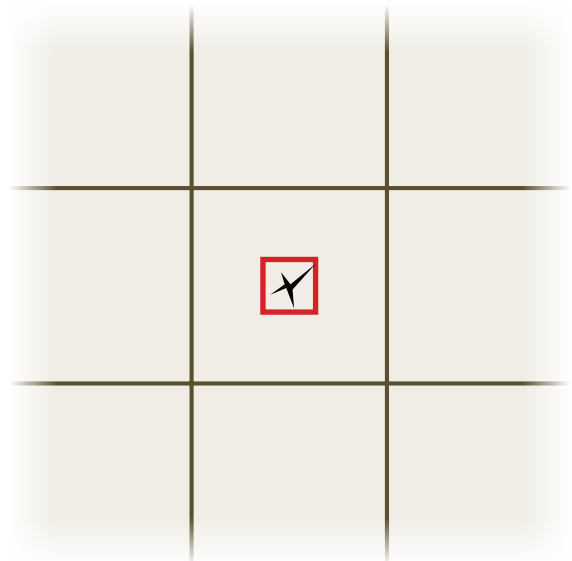


STEP THREE: CUT DIAGONALS

Then cut four straight lines from the cut out square to the corner of the damaged tile

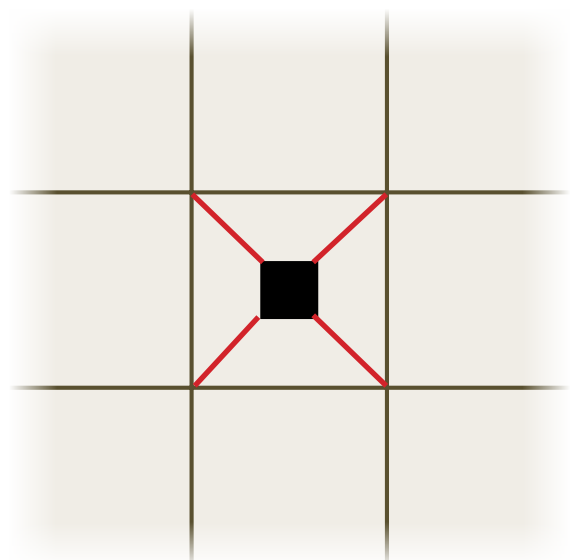


STEP FOUR: LEVER TILE OUT

Using a metal lever gently prise the lever under the edge of the tile, lift up from the middle and at the same time pull the tile backwards to disengage the interlocking tabs. Repeat on all four sides.

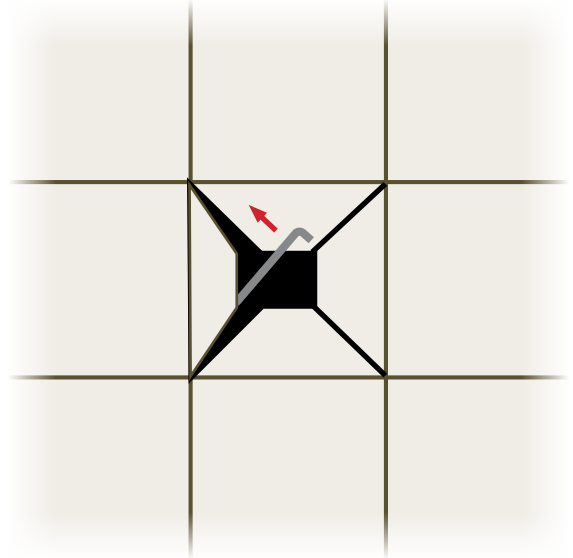


STEP FIVE: CUT OFF TABS

Cut the Tabs off 3 sides from the existing tiles on the floor, cut the tabs of the 3 matching sides from the new tile.

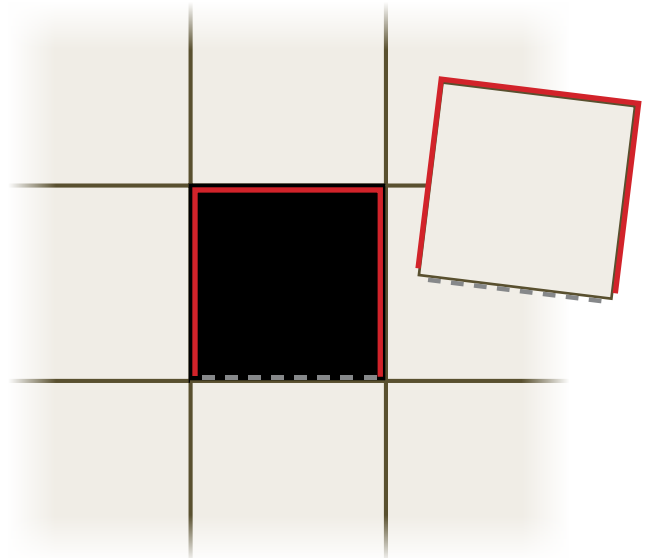

STEP SIX: APPLY ADHESIVE

Using a good construction apply dabs of adhesive on the underside of the new tile.

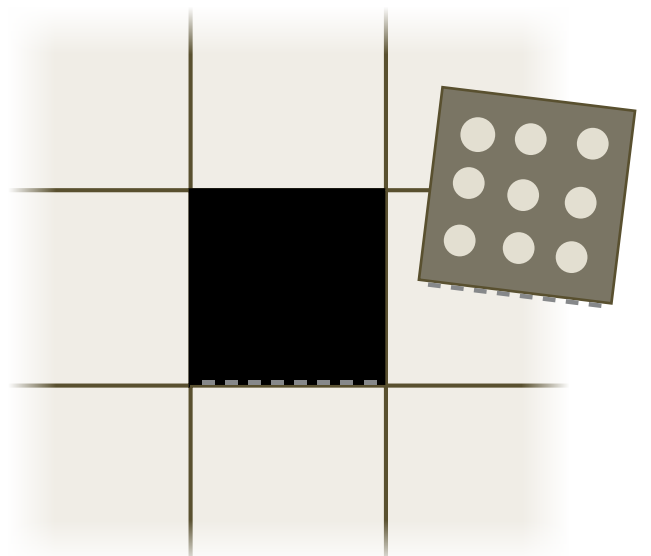

STEP SEVEN: INSERT TILE

Insert the new tile by clicking the tabs on the new tile together with the old tabs on old tile and then press down. Put a weight in the middle of the new tile until adhesive goes off.

You can grout the tile without waiting for the adhesive to go off.

